

fixing accessory

HÉRCULES® BRACKET

For Hércules®, Brico-Hércules®, ECO, Double Wire 6-5-6 and Exotic® panels



LANGUAGE ▾


ESPAÑOL

FRANÇAIS

ENGLISH


Components of a Hércules® bracket

a Front Piece b Rear Piece c Socket Head Cap Screws d Plugs

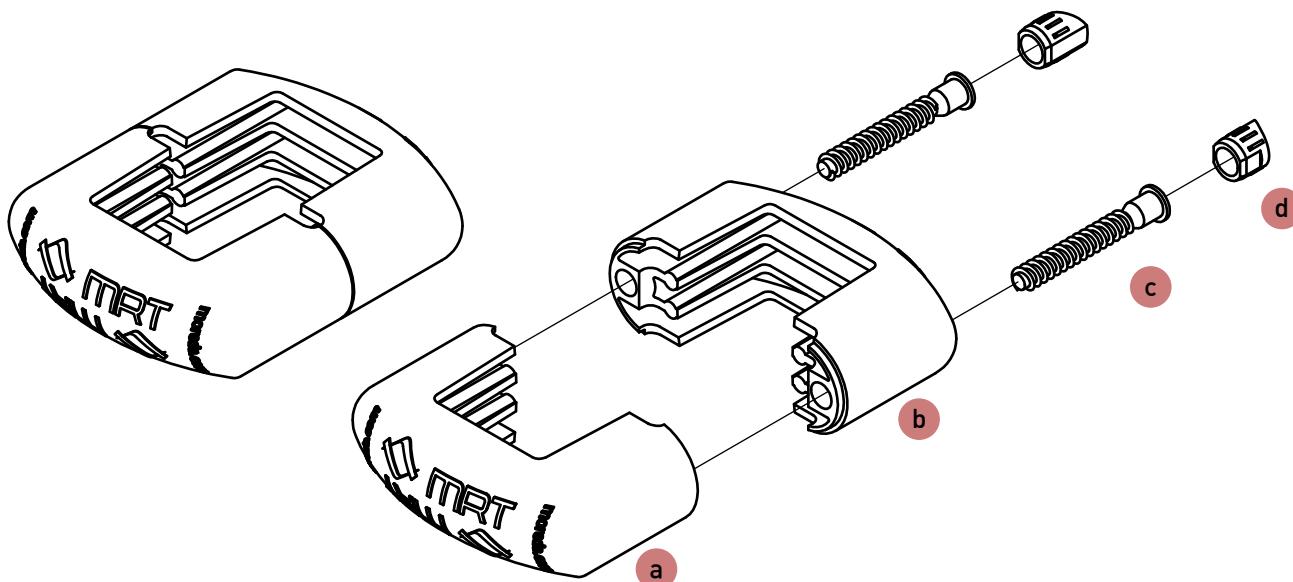


Panel position according to the type of installation

The slots on the sides of the brackets are only meant for corner installations, such as in case B. Keep in mind that only one of the two slots should be used for this type of setup.

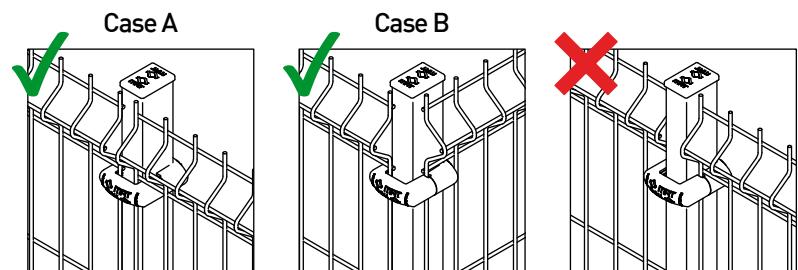

For better security, install the bracket with the rear part inside the fenced area. This will make it harder to access the screws from outside, lowering the risk of unauthorized tampering.

Case A. Linear installation (180°) or angled installation between 136° and 234°.

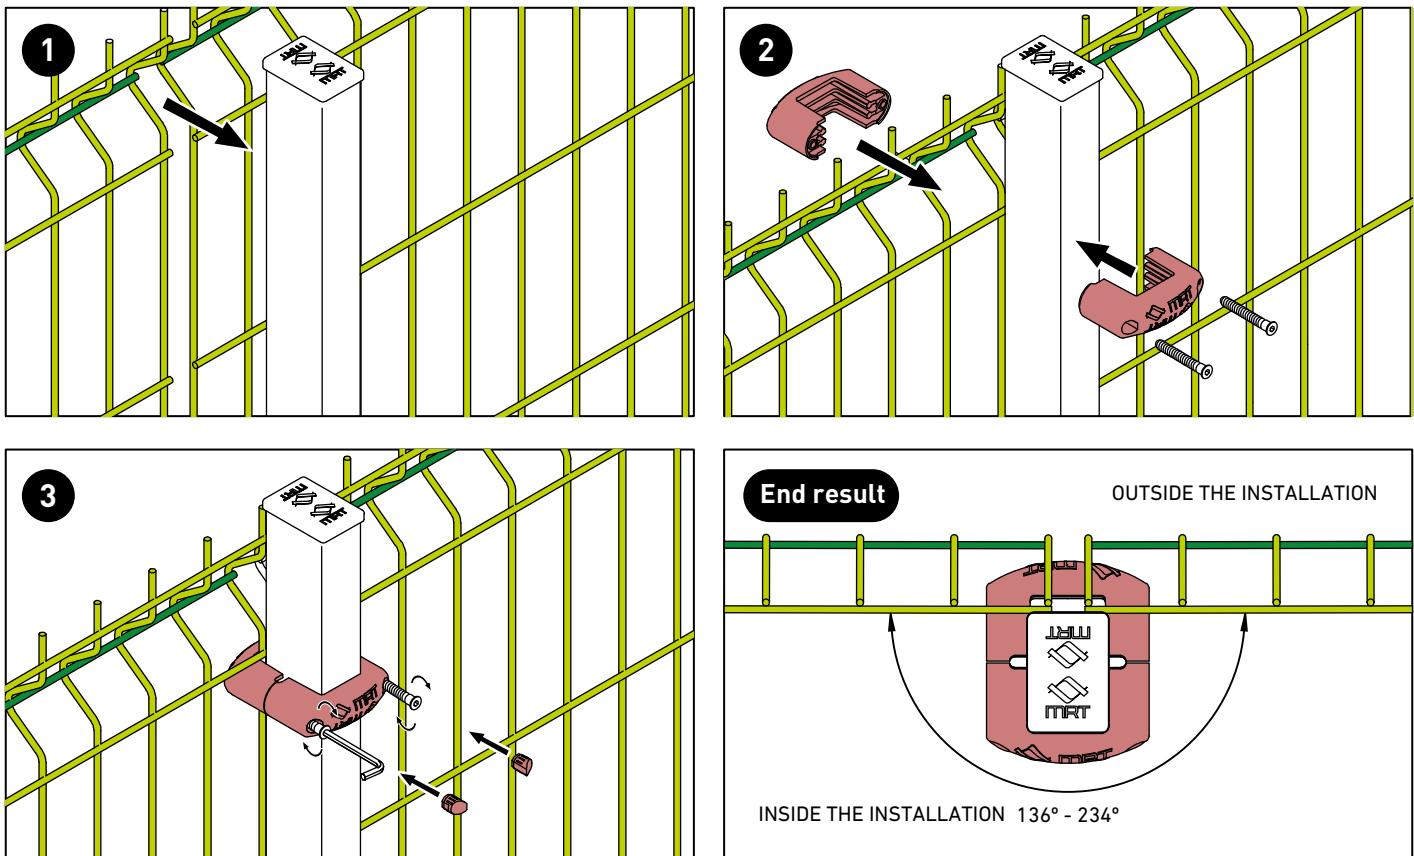

Case B. Corner installation (90°) or angled installation between 84° and 136°.

