

fixing accessory

HÉRCULES® STAPLE

For Hércules®, Brico-Hércules®, ECO,
Double Wire 6-5-6 and Exotic® panels



🌐 LANGUAGE ▼

ESPAÑOL


FRANÇAIS

ENGLISH

Hércules® Staple details

Hércules® staples are supplied without screws.

These instructions assume that the staples will be installed
with DIN 7504 K 6.3x32 self-drilling screws.

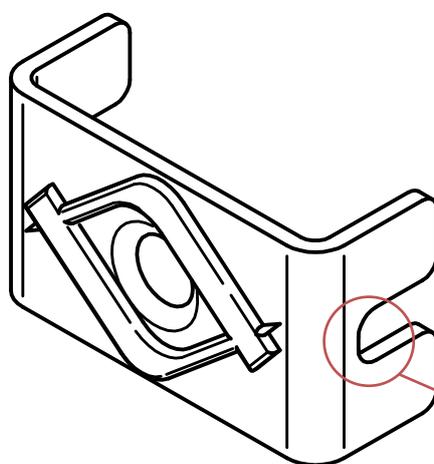




Tip

In linear installation sections,
without level changes or angles, the
horizontal wires of the panel must
be seated in the notches of the metal
staple, ensuring the panel's vertical
immobilization.





Panel position according to the type of installation

The Hércules® staple must be placed on the narrow side of the post (40 mm), with its tabs fitting snugly around the post to ensure optimal fastening.

This applies regardless of the installation configuration:

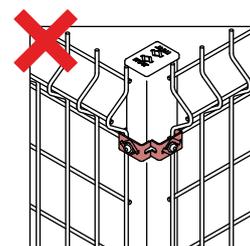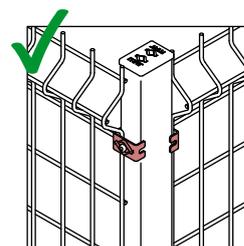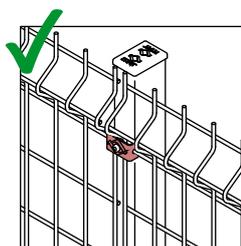

Case A. Linear installation (180°) or angled installation between 120° and 238°.

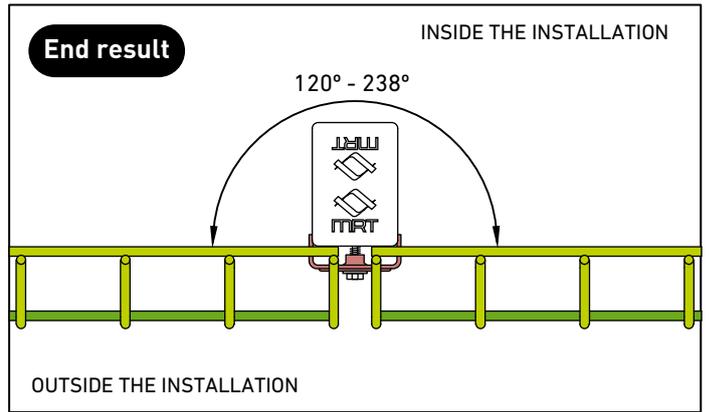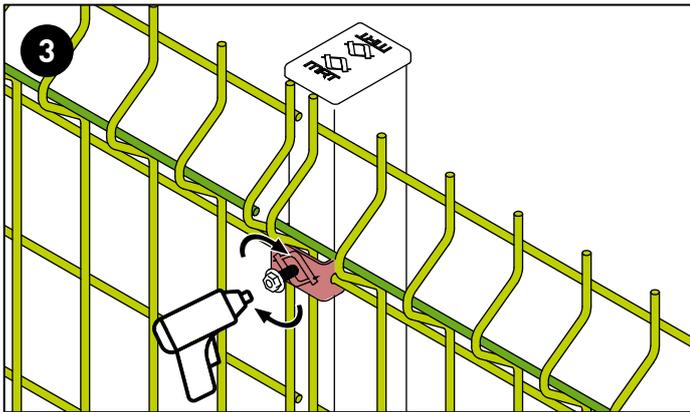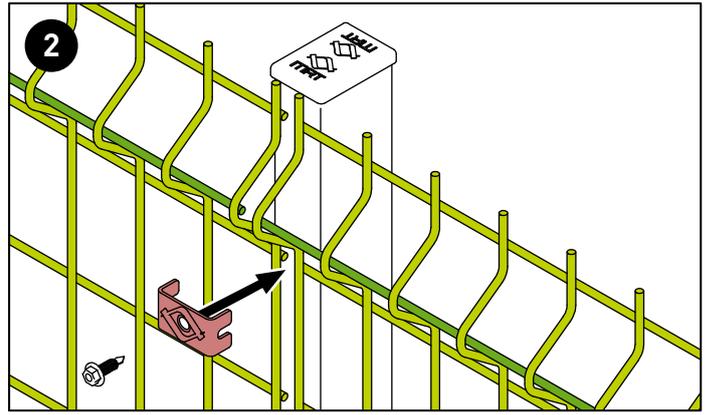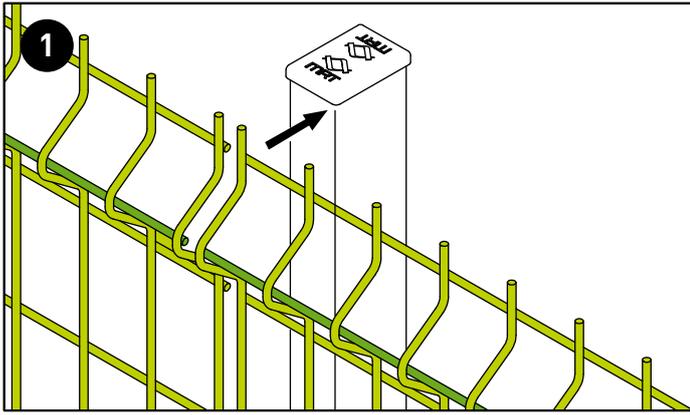

Case B. Corner installation (90°) or angled installation between 0° and 167°.

