

ULTRAFIX® BRACKET


For Hércules®, Brico-Hércules®, ECO, Double Wire 6-5-6 and Exotic® panels

🌐 LANGUAGE ▼

ESPAÑOL
FRANÇAIS
ENGLISH

Components of a Ultrafix® bracket

- a Metal staple
- b Front part
- c Back part
- d Screw stop
- e Screw
- f Caps

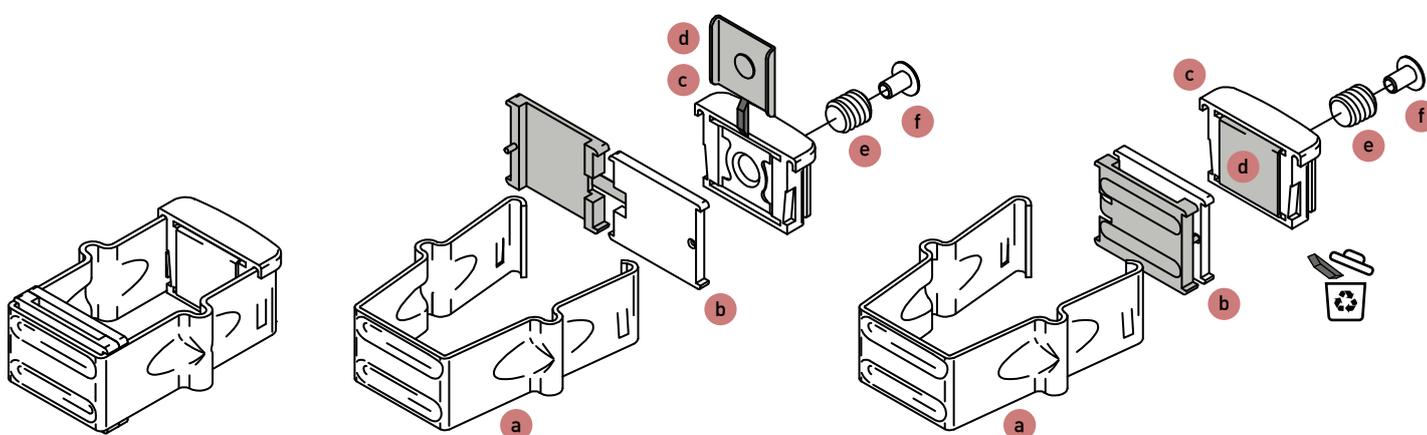




Note

Component «b» includes a hinge that allows the part to be folded.







Components «c» and «d» are supplied as a single piece. They must be separated and installed in the positions shown in the diagram.

Panel position according to the type of installation

The slots on the sides of the brackets are only meant for corner installations. Keep in mind that only one of the two slots should be used for this type of setup.

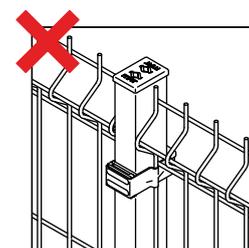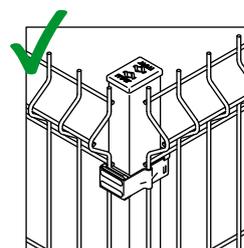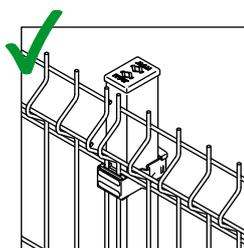

Case A. Linear installation (180°) or angled installation between 160° and 215°.

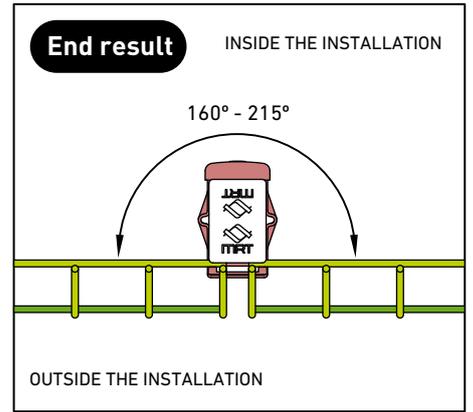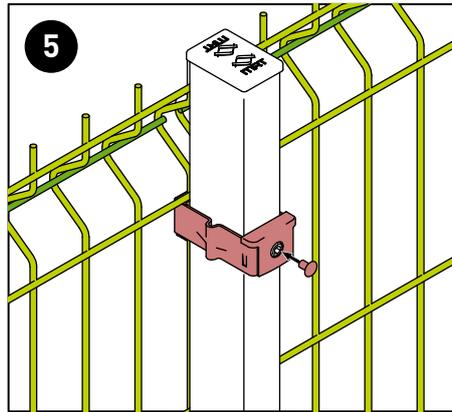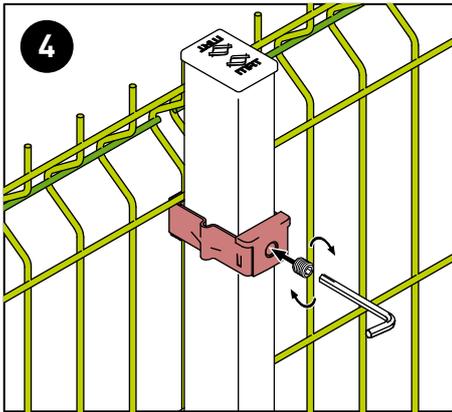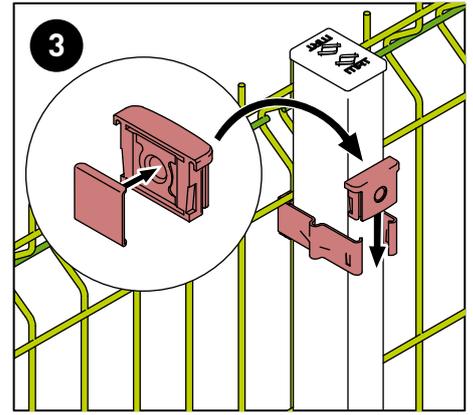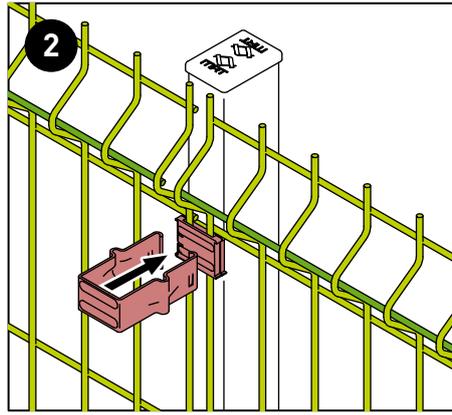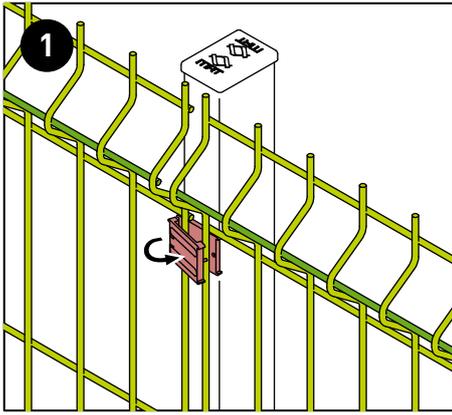

Case B. Corner installation (90°) or angled installation between 76,5° and 160°.

