






For panels with bends like Hércules®, Brico-Hércules® and ECO


## Position of the bracket according to the location on the post


The MRT mark on the bracket must always be positioned on the outside of the installation. Therefore, the threaded rod used to attach the accessory must always be on the inside.

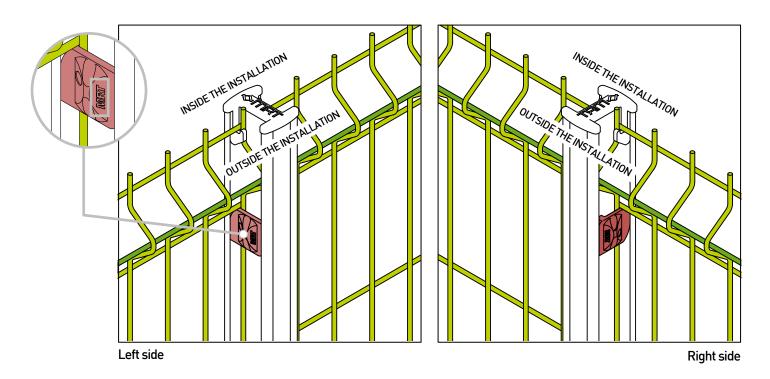


## Position of the vertical panel wire according to type of installation

Case A. Installation in line (180°) or angled, from 142° to 180°. Case B. Corner installation from 66° to 111°.

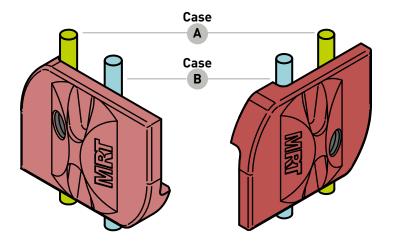

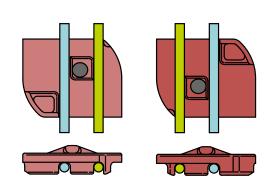

Case A. Installation in line (180°) or angled, from  $142^{\circ}$  to  $180^{\circ}$ .

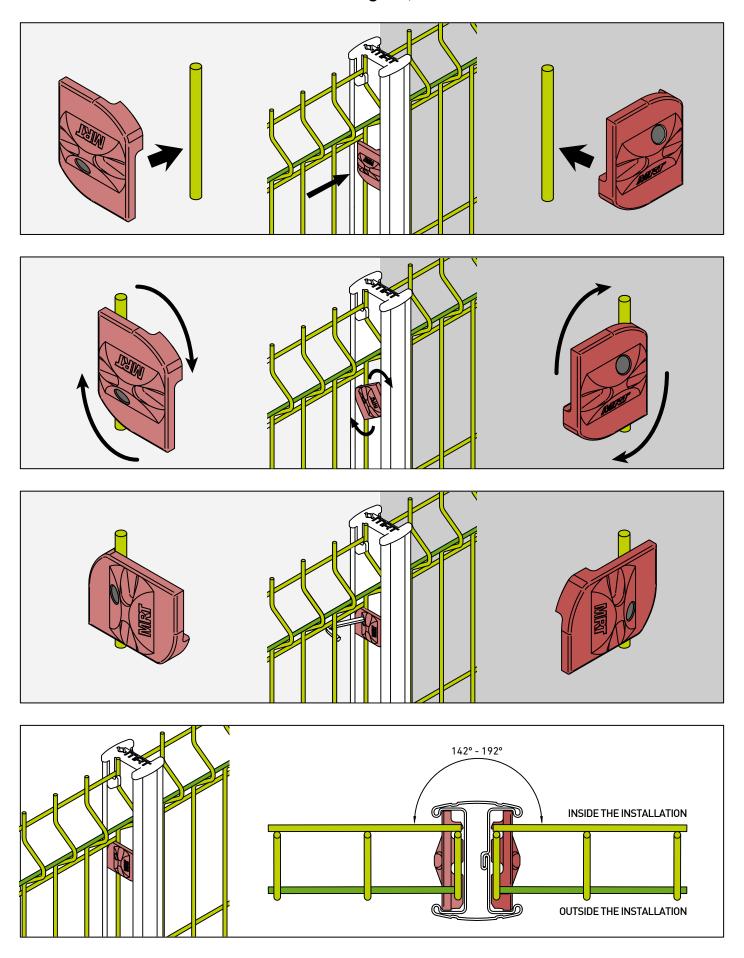

Case B. Corner installation from 66° to 111°.

